

AC Current Probe Model JM861

User Manual

DESCRIPTION

The JM861 (Catalog #2110.90) is designed for use in industrial environments. The squared jaws permit multiple conductor or bus bar positioning. The Model JM861 accurately measures AC current waveforms and has proportional mV output for direct readings on oscilloscopes. Three-position slide switch on the handle selects ranges. The Model JM861 offers an insulated 6.5 ft. coaxial cable with insulated BNC connector rated 600Vrms and is compatible with any AC voltmeter, multimeter, or other voltage measuring instrument with an input impedance greater than $1M\Omega$, 47 pF. To achieve the stated accuracy, use the JM861 with a voltmeter having an accuracy of 0.75% or better.

WARNING

These safety warnings are provided to ensure the safety of personnel and proper operation of the instrument.

Read the instruction manual completely and follow all the safety information before attempting to use or service this instrument.

Use caution on any circuit: Potentially high voltages and currents may be present and may pose a shock hazard.

Read the Safety Specifications section prior to using the current probe. Never exceed the maximum voltage ratings given.

Safety is the responsibility of the operator.

ALWAYS connect the current probe to the display device before clamping the probe onto the sample being tested.

ALWAYS inspect the instrument, probe, probe cable, and output terminals prior to use. Replace any defective parts immediately.

NEVER use the current probe on electrical conductors rated above 600V in overvoltage category III (CAT III). Use extreme caution when clamping around bare conductors or bus bars.

INTERNATIONAL ELECTRICAL SYMBOLS



This symbol signifies that the current probe is protected by double or reinforced insulation. Use only factory specified replacement parts when servicing the instrument.



This symbol signifies CAUTION! and requests that the user refer to the user manual before using the instrument.



This is a type A current sensor. This symbol signifies that application around and removal from HAZARDOUS LIVE conductors is permitted.

DEFINITION OF MEASUREMENT CATEGORIES

CAT IV: For measurements performed at the primary electrical supply (<1000V) such as on primary overcurrent protection devices, ripple control units, or meters.


CAT III: For measurements performed in the building installation at the distribution level such as on hardwired equipment in fixed installation and circuit breakers.

CAT II: For measurements performed on circuits directly connected to the electrical distribution system. Examples are measurements on household appliances or portable tools.

RECEIVING YOUR SHIPMENT

Upon receiving your shipment, make sure that the contents are consistent with the packing list. Notify your distributor of any missing items. If the equipment appears to be damaged, file a claim immediately with the carrier and notify your distributor at once, giving a detailed description of any damage.



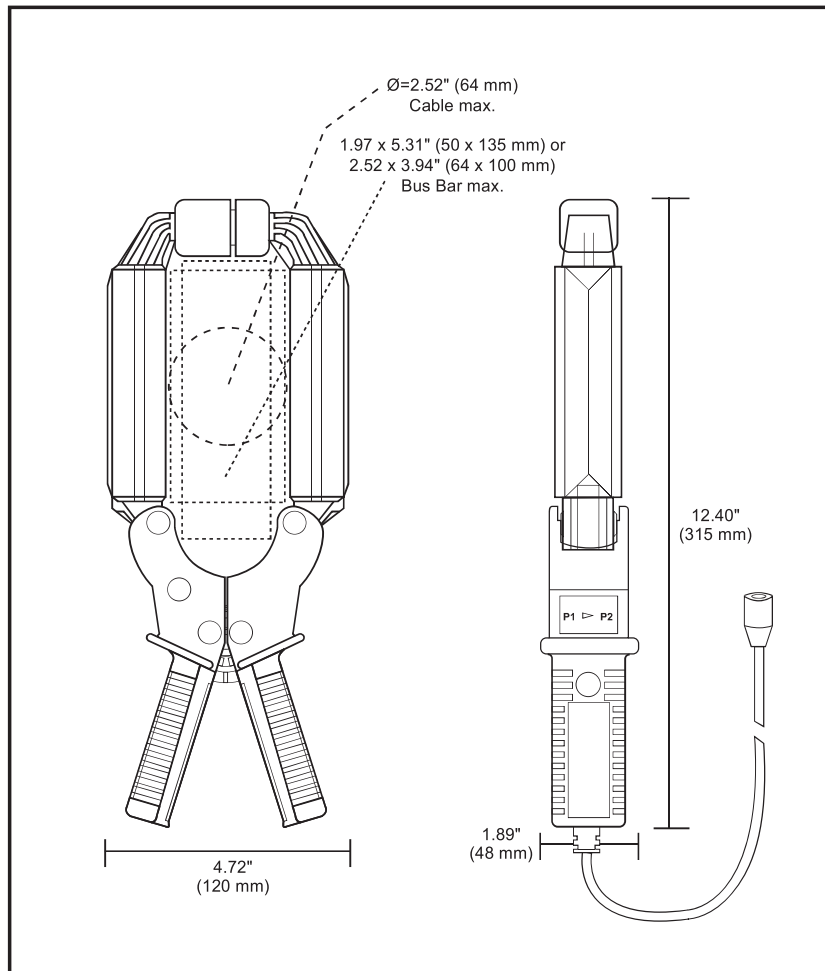

ELECTRICAL SPECIFICATIONS

Current Range:

1 to 30A AC continuous cycle; 90A peak to peak
 1 to 300A AC continuous cycle; 900A peak to peak
 1 to 2400A AC continuous cycle; 9000A peak to peak
 1 to 2400A AC continuous cycle for the full temperature range
 (3000A if temperature is < 35°C or 95°F)

Output Signal:

10 mV AC/A AC (0.3V at 30A)
 1 mV AC/A AC (0.3V at 300A)
 0.1 mV AC/A AC (0.3V at 3000A)

Accuracy and Phase Shift*:

30A RANGE

Primary current	1.5A	6A	30A
Accuracy %	2% ± 1 mV		
Phase shift	20°	10°	5°

300A RANGE

Primary current	15A	60A	300A
Accuracy %	2% ± 0.5 mV		
Phase shift	3°	1.5°	1°

3000A RANGE

Primary current	150A	600A	3000A
Accuracy %	2% ± 0.2 mV		
Phase shift	3°	1.5°	1°

(*Reference conditions: 23°C±3°K, 20 to 85% RH, 48 to 65 Hz, external magnetic field < 40 A/m, no DC component, no external current carrying conductor, test sample centered.)
Load impedance ≥ 1MΩ, 47 pF.

Accuracy: Per IEC 185

Ampere Second Product: 90 A.S

Frequency Range: 10 to 50 kHz; current derating above 5 kHz for continuous use

Load Impedance: 1 MΩ, 47 pF

Working Voltage: 600V AC

Common Mode Voltage: 600V AC

Influence of Adjacent Conductor:
0.005A/A AC

Influence of Conductor in Jaw Opening:
1% ± 0.1A of reading

Influence of Frequency from 10Hz to 10kHz:
1 dB on all ranges

Influence of DC Voltage: 0.05% per A DC

MECHANICAL SPECIFICATIONS

Operating Temp.: 14° to 122°F (-10° to 50°C)

Storage Temp.: -40° to 176°F (-40° to 80°C)

Influence of Temperature: < 0.1% per 10°K

Jaw Opening: 3.54" (90mm)

Maximum Conductor Size:

Cable: 2.52" ∅ max. (64mm)

Bus bar: 1.97 x 5.31" (50 x 135mm)

2.52 x 3.94" (64 x 100mm)

Envelope Protection: IP 20 (IEC 529)

Drop Test: 500 mm (IEC 68-2-32)

Mechanical Shock: 100 g (IEC 68-2-27)

Vibration:

10/55/10 Hz, 0.15 mm (IEC 68-2-6)

Polycarbonate Material:

Handles: 10% fiberglass charged
polycarbonate UL 94 V0

Jaws: ABS UL 94 V2

Dimensions:

4.72 x 12.40 x 1.89" (120 x 315 x 48 mm)

Weight: 2.65 lbs. (1200 g)

Colors: Dark gray handles with red jaws

Output:

Insulated 6.5 ft. (2 m) coaxial cable with insulated
BNC connector rated 600V rms

SAFETY SPECIFICATIONS



Electrical:

Double insulation or reinforced insulation
between primary or secondary and outer case of
handle upon IEC 1010-2-32

Common Mode Voltage:

600V CAT III, Pollution: 2

ORDERING INFORMATION

Current Probe JM861Cat #2110.90

Accessories:

Banana/BNC Connector XF-SS

(4 mm banana plug)Cat #2111.32

OPERATION

Please make sure that you have already read and fully understand the WARNING section on page 1.

Making Measurements with the AC Current Probe Model JM861

Connect the black and red terminals to the Volt AC range of your DMM or voltage measuring instrument. Select the appropriate voltage range. If the current magnitude is unknown, select the highest range (3000A AC / 3V AC) on the switch probe located inside the handle. Clamp the probe around the conductor to be tested. If the reading is less than 300mV or 30mV, select the lower range until you obtain the best resolution. Read the value display on the DMM (in mV) and divide it by the range selected. (If reading = 2.59V on the 10mV AC/A AC range, the current flowing through the probe is $2590\text{mV} \div 10 = 259\text{A AC}$).

For best accuracy: carefully center the conductor inside the probe jaw, avoid if possible, the proximity of other conductors which may create noise.

Tips for Making Precise Measurements

When using a current probe with a meter, it is important to select the range that provides the best resolution. Failure to do this may result in measurement errors.

Make sure that probe jaw mating surfaces are free of dust and contamination. Contaminants cause air gaps between the jaws, increasing the phase shift between primary and secondary. It is very critical for power measurement.

MAINTENANCE:



LIMITED WARRANTY

The current probe is warranted to the owner for a period of 2 years from the date of original purchase against defects in manufacture. This limited warranty is given by AEMC® Instruments, not by the distributor from whom it was purchased. This warranty is void if the unit has been tampered with, abused or if the defect is related to service not performed by AEMC® Instruments.