

AC Current Probe Model SR759

User Manual

DESCRIPTION

The SR759 (Catalog #2116.33) is designed for use in industrial environments. The ergonomic design allows it to easily attach to cables or small bus bars. The “circular” jaws guarantee a very good accuracy and low phase shift. The probe has four measurement ranges with the highest range measuring to 1000Arms continuous and is compatible with any AC Voltmeter, multimeter, or other voltage measurement instrument that has the following features: Range and resolution capable of displaying 1mV of output per amp of measured current; Voltmeter accuracy of 0.75% or better to take full advantage of the accuracy of the probe; Input impedance of $\geq 10M\Omega$.

WARNING

The safety warnings are provided to ensure the safety of personnel and proper operation of the instrument. Read the instruction completely.

- Use caution on any circuit: potentially high voltages and currents may be present and may pose a shock hazard.
- Do not use the probe if damaged. Always connect the current probe to the measuring device before it is connected around the conductor
- Do not use on non-insulated conductor with a potential to ground greater than 600V CAT III pollution 2. Use extreme caution when clamping around bare conductors or bus bars.
- Before each use, inspect the probe; look for cracks in housing or output cable insulation.
- Do not use clamp in wet environment or in locations that hazardous gases exist.
- Do not use the probe anywhere beyond the tactile barrier.

INTERNATIONAL ELECTRICAL SYMBOLS



This symbol signifies that the current probe is protected by double or reinforced insulation. Use only factory specified replacement parts when servicing the instrument.



This symbol signifies CAUTION! and requests that the user refer to the user manual before using the instrument.



This is a type A current sensor. This symbol signifies that application around and removal from HAZARDOUS LIVE conductors is permitted.

DEFINITION OF MEASUREMENT CATEGORIES

CAT IV: For measurements performed at the primary electrical supply (<1000V) such as on primary overcurrent protection devices, ripple control units, or meters.

CAT III: For measurements performed in the building installation at the distribution level such as on hardwired equipment in fixed installation and circuit breakers.


CAT II: For measurements performed on circuits directly connected to the electrical distribution system. Examples are measurements on household appliances or portable tools.

RECEIVING YOUR SHIPMENT

Upon receiving your shipment, make sure that the contents are consistent with the packing list. Notify your distributor of any missing items. If the equipment appears to be damaged, file a claim immediately with the carrier and notify your distributor at once, giving a detailed description of any damage.



CHAUVIN ARNOUX GROUP

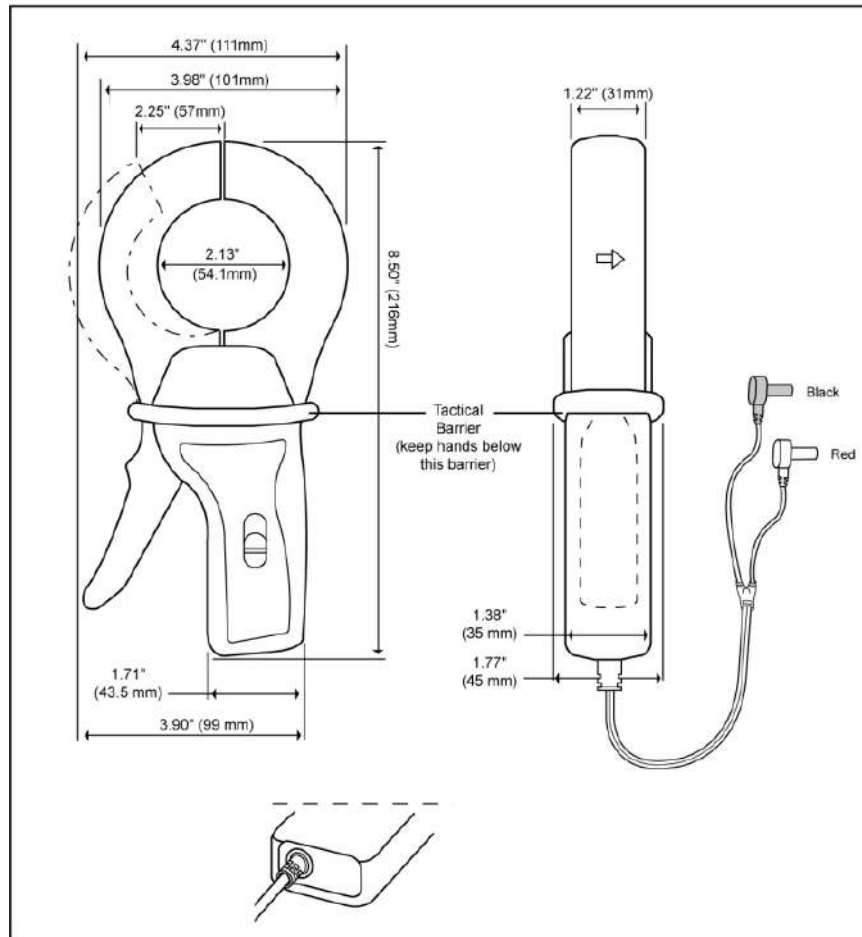

ELECTRICAL SPECIFICATIONS

Current Range:

1mA to 1.2A, 0.01 to 12A, 0.1 to 120A, 1 to 1200A

Output Signal: 1000mV/AAC (1V @ 1A),
100mV/AAC (1V @ 10A), 10mV/AAC (1V @
100A), 1 mV/AAC (1V @ 1000A)

Accuracy and Phase Shift*:

1A Range

Primary Current	Accuracy %	Phase Shift
0.001 to 0.01A	3% + 1mV	Not Specified
0.01 to 0.1A	≤3% + 1mV	Not Specified
0.1 to 1A	≤0.7% + 1mV	≤10°
1 to 1.2A	≤0.7% + 1mV	≤10°

10A Range

Primary Current	Accuracy %	Phase Shift
0.01 to 0.1A	1% + 0.2mV	Not Specified
0.1 to 1A	≤0.5% + 0.2mV	≤5°
1 to 10A	≤0.5%	≤2°
10 to 12A	≤0.5%	≤2°

100A Range

Primary Current	Accuracy %	Phase Shift
0.1 to 1A	1% + 0.2mV	Not Specified
1 to 10A	≤0.5% + 0.2mV	≤2°
10 to 100A	≤0.3%	≤1°
100 to 120A	≤0.2%	≤1°

1000 A Range

Primary Current	Accuracy %	Phase Shift
1 to 10A	1% + 0.2mV	Not Specified
10 to 100A	≤ 0.5% + 0.2mV	≤ 2°
100 to 1000A	≤ 0.2%	≤ 1°
1000 to 1200A	≤ 0.2%	≤ 1°

*Reference conditions: 23°C ± 3°K, 20 to 75% RH, 48 to 65Hz, external magnetic field < 40A/m, no DC component, no external current carrying conductor, test sample centered. Load impedance 10MΩ

Overload: 1200A for 15 min on, 30 min off

Accuracy: Per IEC 185

Frequency Range: 30Hz to 3kHz; current derating above 500Hz using the formula:

$$1000A \times \frac{1}{F \text{ (kHz)}}$$

Load Impedance: 100kΩ min

Working Voltage: 600V CAT III

Common Mode Voltage: 600V CAT III

Influence of Adjacent Conductor: < 1mA/AAC

Influence of Conductor in Jaw Opening:
0.3% of Reading

Influence of Frequency:

1mV/A Range: < 1% R from 10Hz to 1kHz

10mV/A Range: < 1.5% R from 10Hz to 3kHz

100mV/A Range: < 2% R from 10Hz to 3kHz

1000mV/A Range: < 2% R from 30Hz to 1kHz

Open Voltage: 8V peak max.

MECHANICAL SPECIFICATIONS

Operating Temperature:

14° to 122°F (-10° to 50°C)

Storage Temperature:

-4° to 158°F (-20° to 70°C)

Influence of Temperature:

< 0.15% per 10°K

Influence of Humidity:

From 10 to 90%: 0.1%

Jaw Opening: 2.25" (57mm) max

Maximum Conductor Size:

2.05" (52mm)

Envelope Protection: IP 40 (IEC 529)

Drop Test: 1 m (IEC 68-2-32)

100 g (IEC 68-2-27)

Vibration:

25 to 55Hz, 0.25mm

15 to 25Hz, 1mm

5 to 15Hz, 0.15mm (IEC 68-2-6)

Material:

Handles and jaws: Polycarbonate UL94V0

Dimensions:

4.37 x 8.50 x 1.77" (111 x 216 x 45mm)


Weight:

1.21 lbs (550g)

Output:

Two-core cord with reinforced or double insulation,
1.5m (5ft) terminated with 2 safety plugs (4mm)

SAFETY SPECIFICATIONS



Electrical Conformity to International Standards:

This instrument is compliant with IEC 61010-2-032,
300V category IV and 600V category III.

Double or reinforced insulation .

Type of current sensor per IEC 61010-2-032:

type A .

Electromagnetic Compatibility:

The device is in conformity with standard IEC
61326-1.

ORDERING INFORMATION

AC Current Probe SR759 Cat #2116.33

Accessories:

Adapter - Banana (Female) – BNC

(Male) (XM-BB) (600V CAT III) Cat #2118.46

Banana plug adapter

(to non-recessed plug) Cat #1017.45

OPERATION

Please make sure that you have already read and fully understand the WARNING section on page 1.

Making Measurements with the AC Current Probe Model SR759

- Connect the black and red terminals to the 2VAC range of your DMM or voltage measuring instrument. Select the appropriate current range (1000/1V). Clamp the probe around the conductor to be tested with the arrow pointed toward the load. Read the value display on the DMM and multiply it by the probe ratio selected. (e.g. If reading = 185mV, the current flowing through the probe is $185 \times 1000 = 185,000\text{mA} = 185\text{A}$ when 1mV/A range is selected.)
- For best accuracy, avoid if possible, the proximity of other conductors which may create noise.

Tips for Making Precise Measurements

- When using a current probe with a meter, it is important to select the range that provides the best resolution. Failure to do this may result in measurement errors.
- Make sure that probe jaw mating surfaces are free of dust and contamination. Contaminants cause air gaps between the jaws, increasing the phase shift between primary and secondary. It is very critical for power measurement.

MAINTENANCE

Warning:

- For maintenance use only original replacement parts.
- To avoid electrical shock, do not attempt to perform any servicing unless you are qualified to do so.
- To avoid electrical shock and/or damage to the instrument, do not get water or other foreign agents into the probe.

Cleaning: To ensure optimum performance, it is important to keep the probe jaw mating surfaces clean at all times. Failure to do so may result in error in readings. To clean the probe jaws, use very fine sand paper (fine 600) to avoid scratching the jaw then gently clean with a soft oiled cloth.

REPAIR AND CALIBRATION

You must contact our Service Center for a Customer Service Authorization number (CSA#). This will ensure that when your instrument arrives, it will be tracked and processed promptly. Please write the CSA# on the outside of the shipping container.

NOTE: All customers must obtain a CSA# before returning any instrument.

TECHNICAL AND SALES ASSISTANCE

If you are experiencing any technical problems, or require any assistance with the proper use or application of this instrument, please contact our technical hotline:

LIMITED WARRANTY

The current probe is warranted to the owner for a period of two years from the date of original purchase against defects in manufacture. This limited warranty is given by AEMC® Instruments, not by the distributor from whom it was purchased. This warranty is void if the unit has been tampered with, abused or if the defect is related to service not performed by AEMC® Instruments.

Please print the online Warranty Coverage Information for your records.